
Configuration Overview

The system administrator uses MAT/Site/User Configuration to define general system operations, MAT sites, and MAT users. MAT/Site/User Configuration is also the main interface from which to access other administration modules. This chapter describes that interface.

In addition, this chapter describes the specific information that the system administrator must have available to perform each configuration task. Detailed instructions for completing these tasks appear in subsequent chapters.

Accessing MAT/Site/User Configuration

To access MAT/Site/User Configuration, double-click on the Meridian Administration Tools icon in the Startup program group.

The MAT Logon dialog appears, prompting for your user ID and password. Enter the default system administrator user ID and password:


User ID: **MAT <Tab>**

Password: **MAT**

Click on **OK**. The Meridian Administration Tools window appears.

Double-click on the MAT/Site/User Configuration icon. The MAT Configuration window appears.

Figure 5
MAT Configuration window

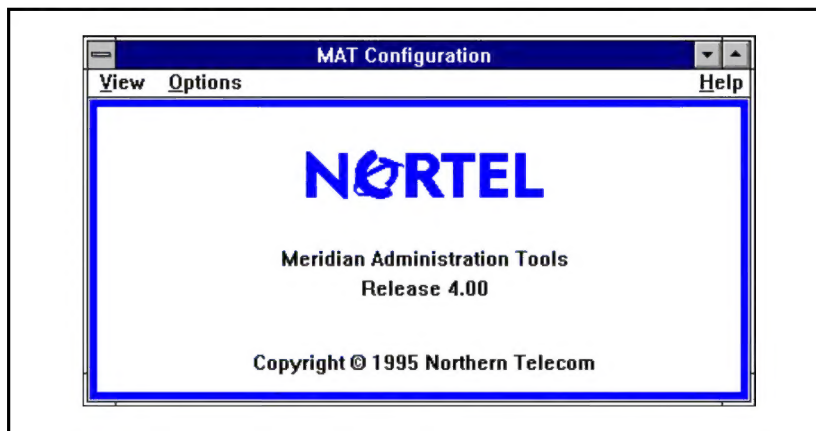

View menu

The View menu provides access to the following MAT configuration activities, each of which is described below:

- MAT System
- Sites
- Users
- User Site
- License
- Exit

MAT System

This menu selection records the registered user and system administrator for the MAT system. “Site Configuration” on page 53 provides detailed instructions for configuring the MAT System.

Sites

Different models of the Meridian 1 require specific communications parameters. The MAT system must use the correct parameters to communicate with each Meridian 1. The site record contains configuration information on the following:

- Meridian 1
- Customer
- Numbering Plan
- Hardware

“Site Configuration” on page 53 provides detailed instructions for configuring Meridian 1 sites.

Users

The system administrator defines each user of the MAT system. The user configuration information includes the following:

- User Name
- Job Title
- Phone Number
- MAT User ID
- Password
- User Disabled
- System Administrator
- Comments

“System and User Configuration” on page 39 provides detailed instructions for configuring Meridian 1 users.

User Site

The system administrator creates User Site associations for each user at each Meridian 1 site. Required information includes:

- The site(s) to which this user is assigned
- MAT modules and applications at each site that the user needs to use (read access)
- MAT modules and applications at each site that the user needs to modify (write access)
- The Meridian 1 switch password to access the Meridian 1 at each site

“System and User Configuration” on page 39 provides detailed instructions for configuring Meridian 1 user sites.

License

This menu selection provides access to a list of the installed MAT applications on this PC.

Exit

To exit from MAT Configuration, click on **Exit** from the View menu.

Options menu

The Options menu of the MAT Configuration window currently provides a single option for defining the appearance of your system.

Language

The Language menu selection lets you to choose the language of your MAT session and its component modules. The installation default is U. S. English.

Help menu

MAT Configuration includes a Help menu that accesses on-line help for the task you are currently performing. The **Help** function also includes a Contents list and a Search capability so you can locate information quickly.

Note: Several MAT dialogs include a **Help** button that also provides on-line information for the task at hand.